



INSTALL INSTRUCTIONS

Brush Guard

Product : 215BRSH-W

Application : 2015+ CHEVY & GMC 2500-3500

(INSTRUCTIONS DIFFER FOR EACH MAKE!)

⚠ WARNING

Read the instructions completely before beginning installation. Before tightening bolts, drilling or cutting where required, check to make sure there are no obstructions such as brake, fuel or electrical lines which may be damaged. Also keep in mind this is an after-market product and MAY require minor shimming and/or trimming, reaming, etc. for proper fit. Road Armor is not responsible for any damages to vehicle.

❗ IMPORTANT NOTICE

- Be sure to inspect and test fit your product to ensure proper fitment before having it coated, painted, bed lined, etc.
- Road Armor will not be responsible for the cost of coating your unit if any problems with fit or finish are not noted and addressed beforehand.

SAFETY FIRST!


- FOLLOW ALL INSTRUCTIONS, YOUR SAFETY AND THE SAFETY OF OTHERS IS MOST IMPORTANT.
- WEAR APPROPRIATE EYE PROTECTION AND EXERCISE CAUTION WHEN DRILLING / CUTTING

REQUIRED TOOLS

Metric and SAE Socket Sets and Wrenches





INCLUDED HARDWARE

- (2) Frame Brackets
- (6) 1/2" Grade 8 Bolts
- (12) 1/2" Washers
- (6) 1/2" Lock Washers
- (6) 1/2" Hex Nuts

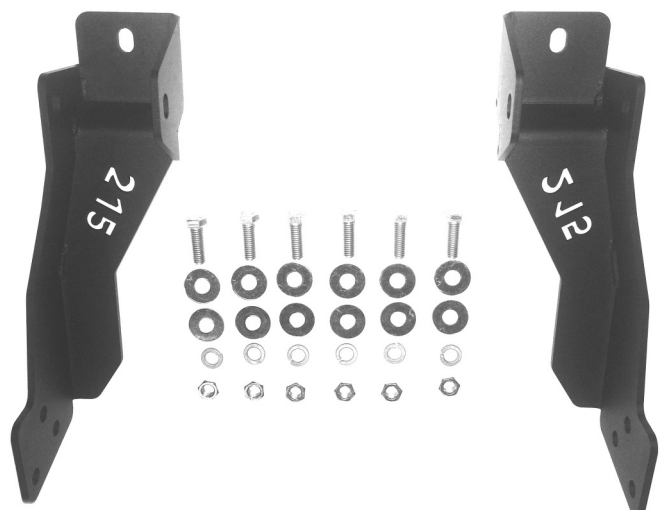





CHEVROLET

- 1 Remove tow hooks
- 2 Insert bracket and tow hooks reusing factory hardware leave loose for adjustment
- 3 Install Brush Guard using supplied 1/2" hardware. Brackets sit on the
- 4 Align and tighten all hardware once satisfied with fitment.

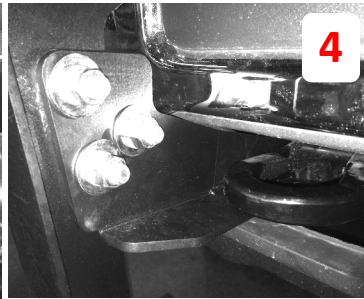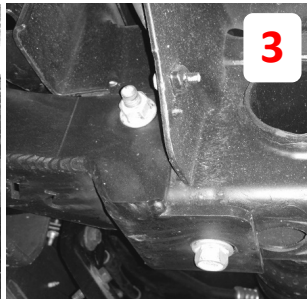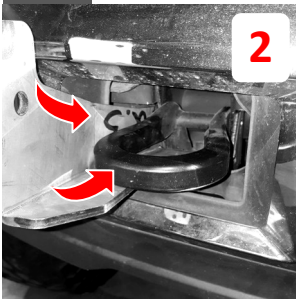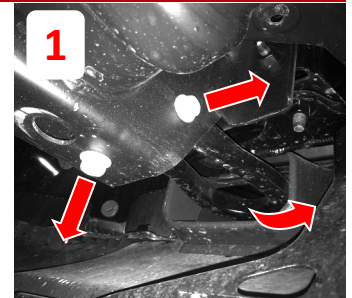


GMC

- 1 Remove dust cover above grill
- 2 Remove 4 bolts on top of grill
- 3 Remove grill by pulling from bottom to top.
- 4 Remove bumper stiffeners.
- 5 Remove factory tow hooks.
- 6 Remove lower bumper bolts and loosen top.
- 7 Remove 1 top bolt at a time to slide bumper out so the bracket can slide under the frame.

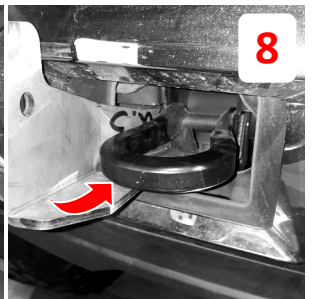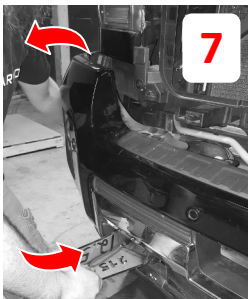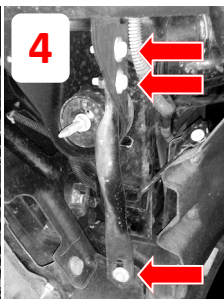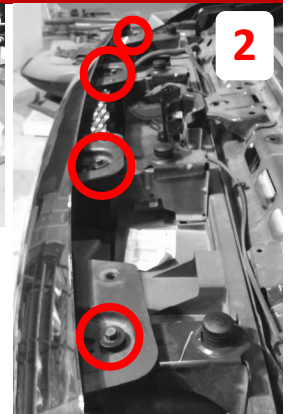

- 8 Install tow hooks
- 9 Reinstall all factory hardware leaving brackets loose
- 10 Reinstall grill and dust cover in reverse order
- 11 Install Brush Guard using supplied 1/2" hardware.

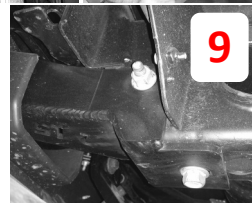

- 12 Align and tighten all hardware once satisfied with fitment.