

# ROAD ARMOR

RULE THE ROAD



## INSTALL INSTRUCTIONS

Application : 2007-2018 Jeep Wrangler JK

JK FRONT FENDER LINER: 507LFF0Z

## I WARNING

Read the instructions completely before beginning installation. Before tightening bolts, drilling or cutting where required, check to make sure there are no obstructions such as brake, fuel or electrical lines which may be damaged. Also keep in mind this is an after-market product and MAY require minor shimming and/or trimming, reaming, etc. for proper fit. Road Armor is not responsible for any damages to vehicle.

## ⓘ IMPORTANT NOTICE

- Be sure to inspect and test fit your product to ensure proper fitment before having it coated, painted, bed lined, etc.
- Road Armor will not be responsible for the cost of coating your unit if any problems with fit or finish are not noted and addressed beforehand.

## SAFETY FIRST!

- FOLLOW ALL INSTRUCTIONS, YOUR SAFETY AND THE SAFETY OF OTHERS IS MOST IMPORTANT.
- WEAR APPROPRIATE EYE PROTECTION AND EXERCISE CAUTION WHEN DRILLING / CUTTING

## REQUIRED TOOLS

Metric and SAE Socket Sets and Wrenches      Wire Crimps  
Cut-Off Wheel

## INCLUDED HARDWARE

- (8) 10-24x1/2" Bolts
- (6) 1/4 x 1" Self Drilling Screw
- (8) 10-24 Flange Nuts
- (1) PSG FENDER LINER
- (1) DVR FENDER LINER




**\*\*ROAD ARMOR Fender Liners are recommended for JEEP Wranglers with stock fender chop kit, ROAD ARMOR 507AFF0B Fenders or aftermarket fender flares.\*\***

**1** Using a pin punch, small screw driver, straight pick tool, awl or scribe, push in center of the six (6) plastic clips around rim of fender to release them.

Then use a panel clip pliers or pry tool to grab the clip from behind and remove. A flat wedge pry bar or dykes will work in a pinch if you don't have the proper tool.




**2** Remove six (6) 10mm Bolts inside fender well and all plastic fasteners. Keep all bolts for future use.

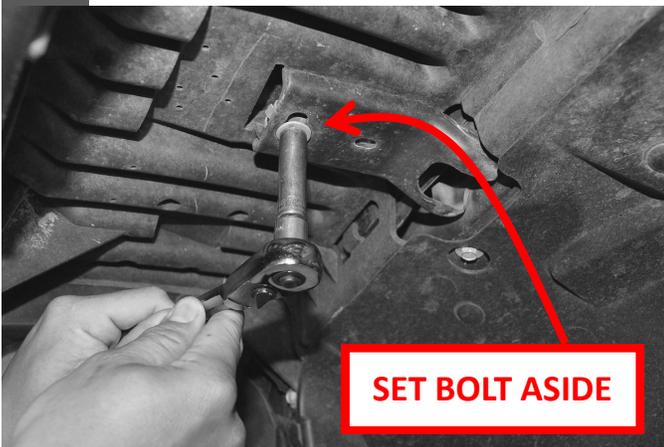

**SET BOLT ASIDE**




**3** Remove all plastic retainers with removal tool if you own one, or carefully with a pair of dykes or a thin pry bar. Alternatively, just grab and pull the whole inner fender well.

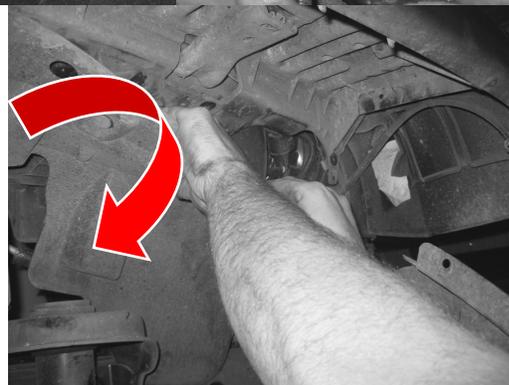

**\*\*ALWAYS test fit/install fender liner prior to custom painting to ensure proper fit.\*\***

4


Install logo backing plate using 4 - #10-24 bolts and flange nuts

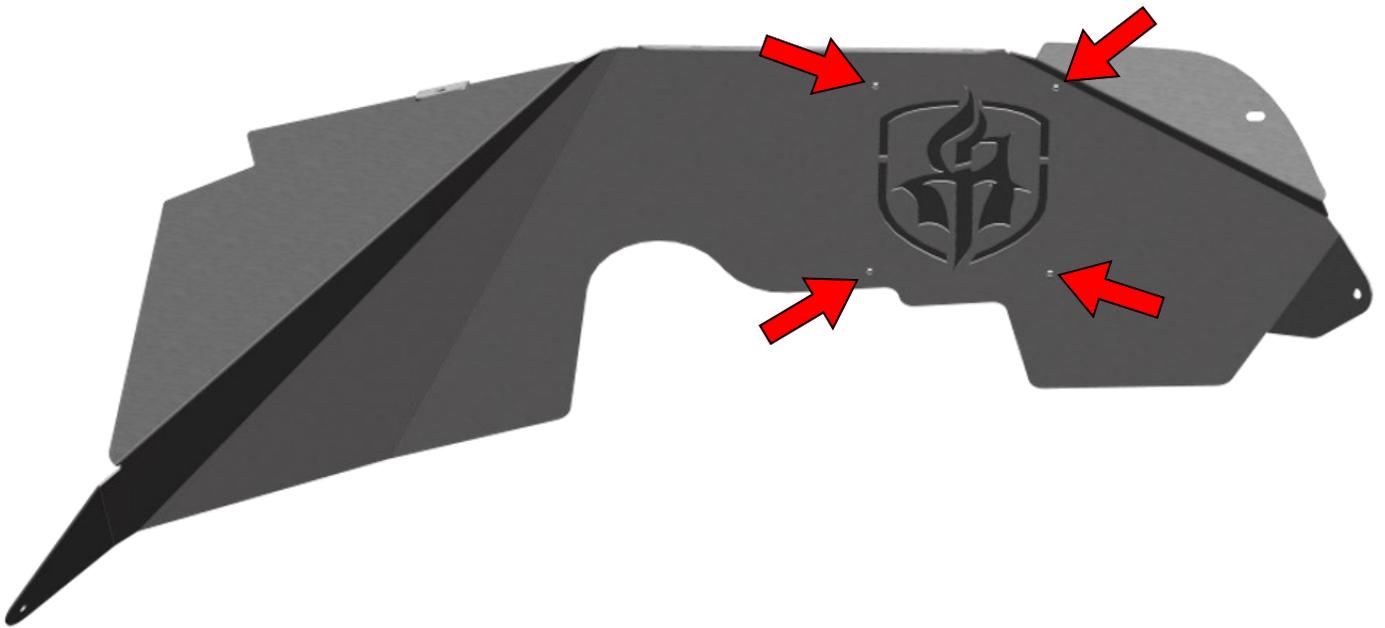

5

Install RA inner fender liner using four OEM bolts previously removed. (RED Arrows)

Secure the remaining edges of liner using 2 - 1/4" Self-Drilling Screws (BLUE Arrows)

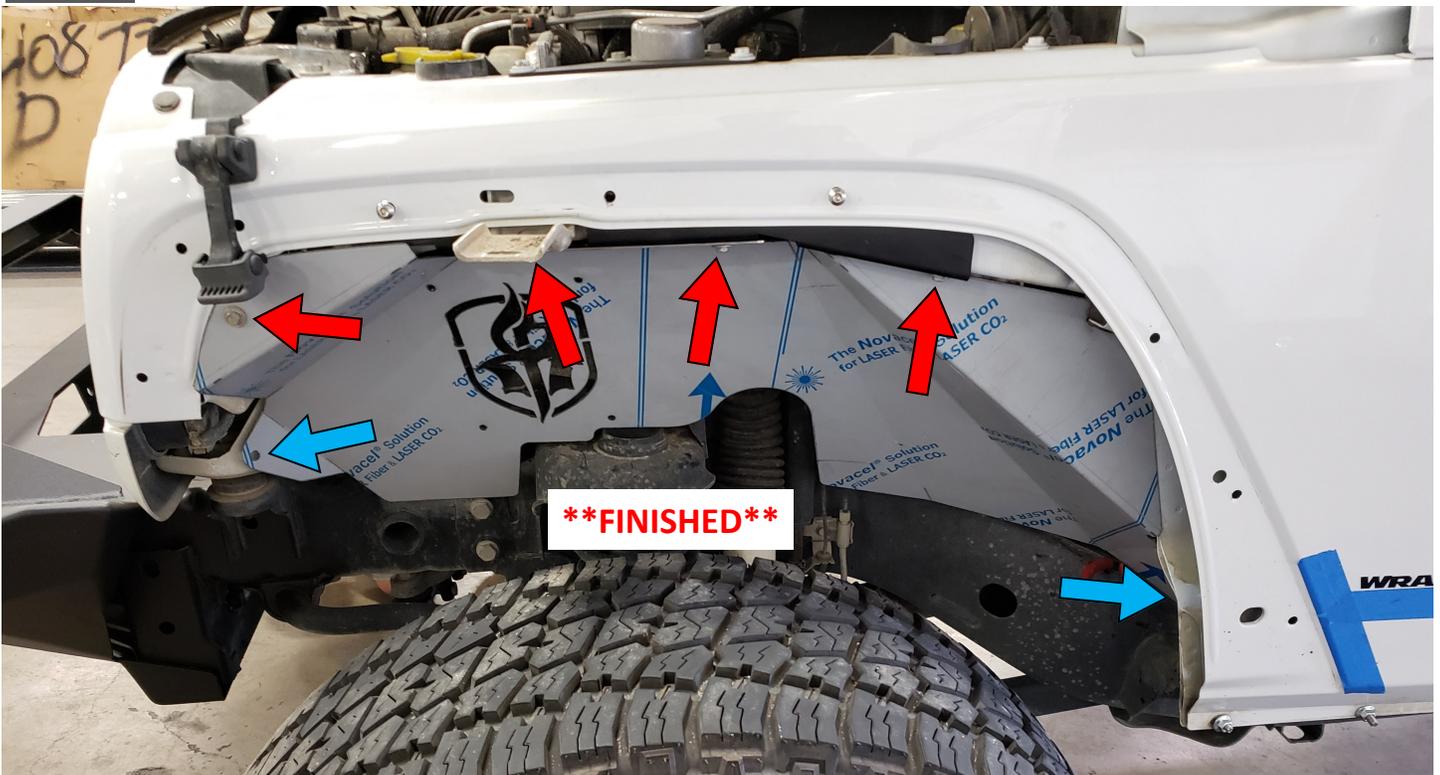

**\*\*Remove protective film after fenders are installed.\*\***