



INSTALL INSTRUCTIONS

Application : 2018+ Jeep Wrangler JL

2007-2018 Jeep Wrangler JK

JL / JK HiLift Jack MOUNT: 518RTCHLMB0B

I WARNING

Read the instructions completely before beginning installation. Before tightening bolts, drilling or cutting where required, check to make sure there are no obstructions such as brake, fuel or electrical lines which may be damaged. Also keep in mind this is an after-market product and MAY require minor shimming and/or trimming, reaming, etc. for proper fit. Road Armor is not responsible for any damages to vehicle.

ⓘ IMPORTANT NOTICE

- Be sure to inspect and test fit your product to ensure proper fitment before having it coated, painted, bed lined, etc.
- Road Armor will not be responsible for the cost of coating your unit if any problems with fit or finish are not noted and addressed beforehand.

SAFETY FIRST!


- FOLLOW ALL INSTRUCTIONS, YOUR SAFETY AND THE SAFETY OF OTHERS IS MOST IMPORTANT.
- WEAR APPROPRIATE EYE PROTECTION AND EXERCISE CAUTION WHEN DRILLING / CUTTING

REQUIRED TOOLS

Metric and SAE Socket Sets and Wrenches

INCLUDED HARDWARE

- (1) 3/8" x 1 1/4" Carriage Bolts
- (2) 3/8" x 2 3/4" Carriage Bolts
- (4) 3/8" x 1" Button Head Bolts
- (8) 3/8" Flange Nuts
- (15) 3/8" Washers
- (3) 3/8" Sprocket
- (1) RA Jack Mount

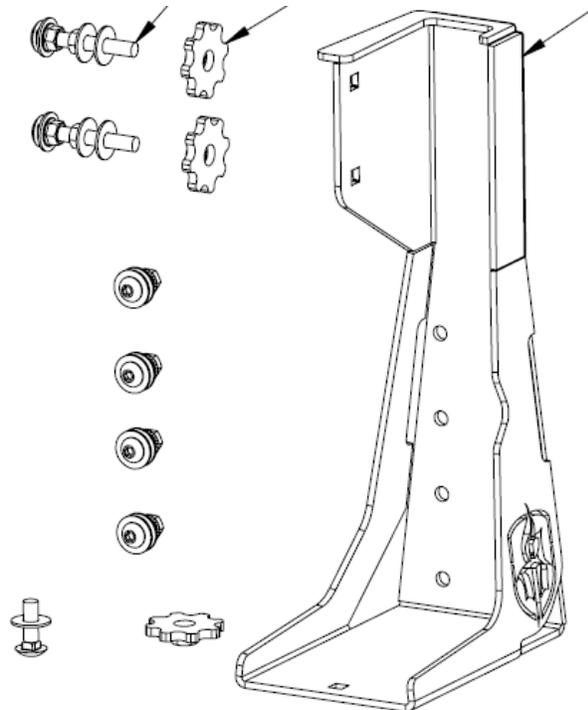

- 1 Install RA-Jack Mount using 4 - 3/8" button head bolts, washers and flange nuts onto carrier.
- 2 Install 2 - 3/8"x2 3/4" carriage bolts, washers and flange nuts onto RA-Jack Mount.
- 3 Loosely install 2 - 3/8" nuts and washers onto carriage bolt 1" away from RA-Jack Mount.
- 4 Loosely install Jack & 2 - 3/8" washer followed by Sprockets onto RA-Jack Mount.
- 5 Install 1 - 3/8"x1 1/4" carriage bolt, washer Sprocket onto Jack Base & RA-Jack Mount.
- 6 Tighten all hardware at this time. (*Be sure to check torque periodically*)

